

SolarEdge Home Hub Inverter - Three Phase – For EU and Australia

Quick Installation Guide
V1.3

solar**edge**

solaredge.com
SolarEdge Technologies GmbH, Werner-Eckert-Str. 6, 81829 Munich, Germany
Subject to change without notice.
© SolarEdge Technologies, Ltd.
All rights reserved. June 2025.

[Up-to-Date Quick
Installation Guide](#)



[Unpacking and
Mounting Video](#)



[Wiring Video](#)



[Datasheet EU](#)




[Datasheet AU](#)



[Full Installation
Guide](#)



What's in the Package

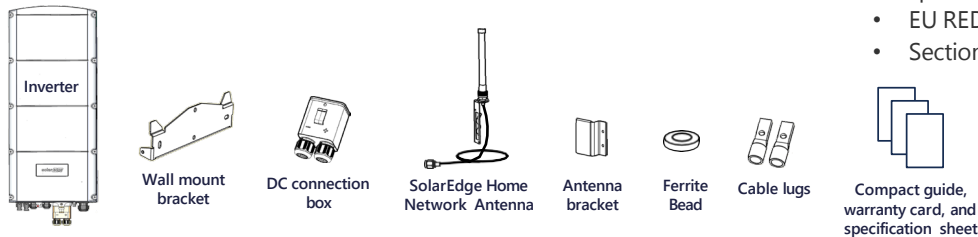

- WARNING!** This symbol denotes a hazard. The symbol calls attention to a procedure that could result in injury or loss of life if not correctly performed or adhered to. Do not proceed beyond a warning note until the conditions are fully understood and met.
- CAUTION!** Denotes a hazard. The symbol calls attention to a procedure that could result in damage or destruction of the product if not correctly performed or adhered to. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.


Tools and Materials




Backup System Installation

- IMPORTANT NOTE!** When installing or upgrading your backup system:
1. First, install the Inverter.
 2. Next, install the Battery.
 3. Finally, if applicable, install the Backup Interface (BUI).

Mounting

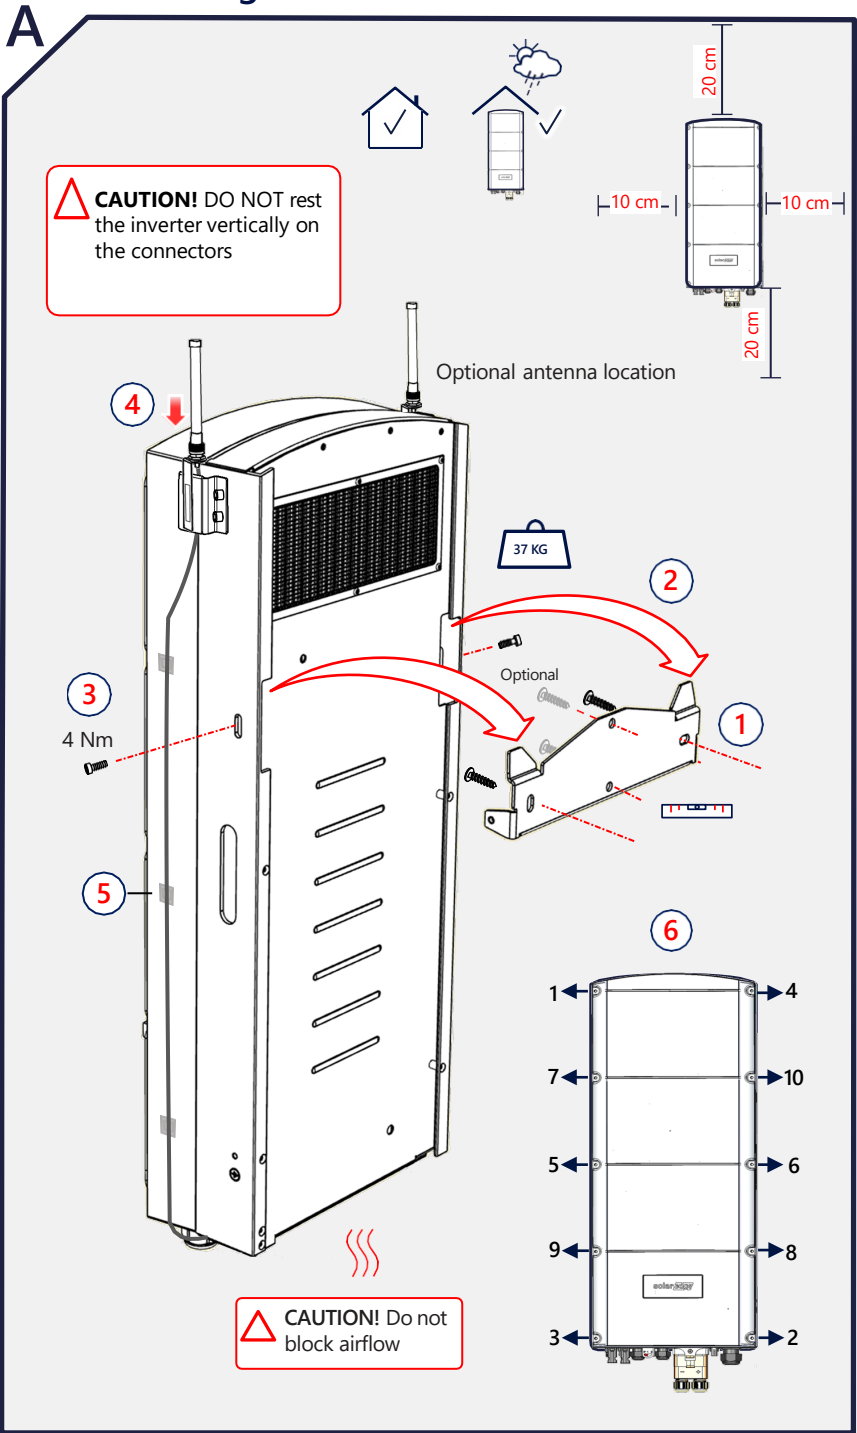


Wiring

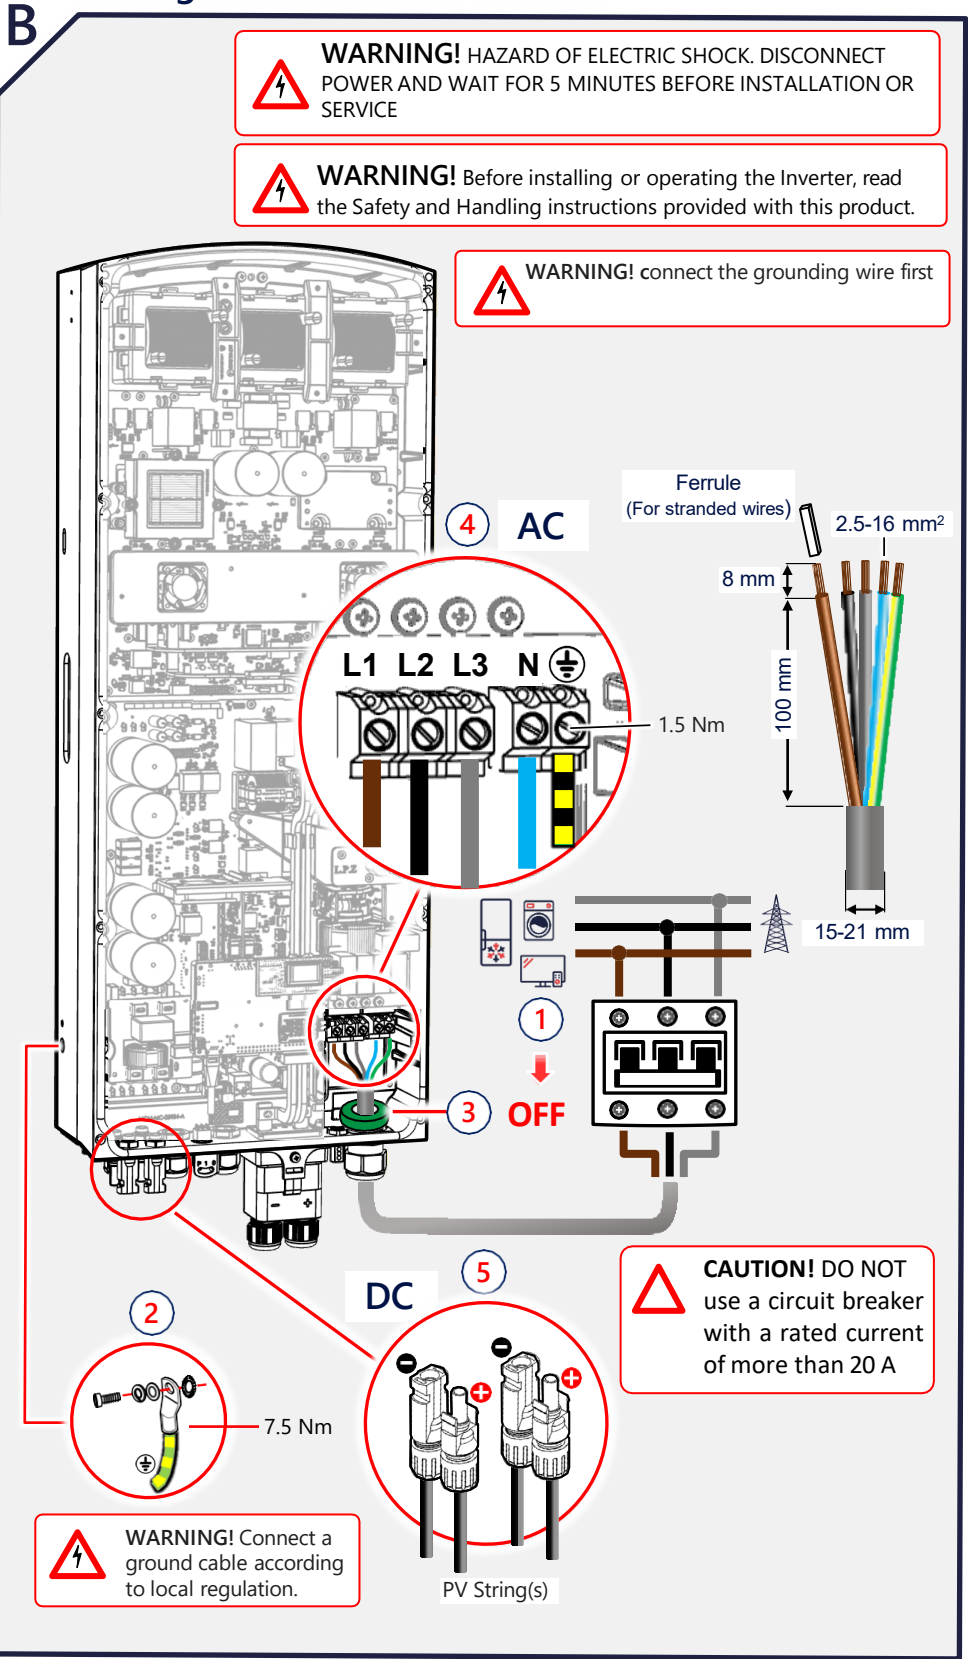


IMPORTANT! The connection to units and accessories shown here is for reference only. For detailed information, refer to the specific product guide.


SolarEdge Home Network Connection

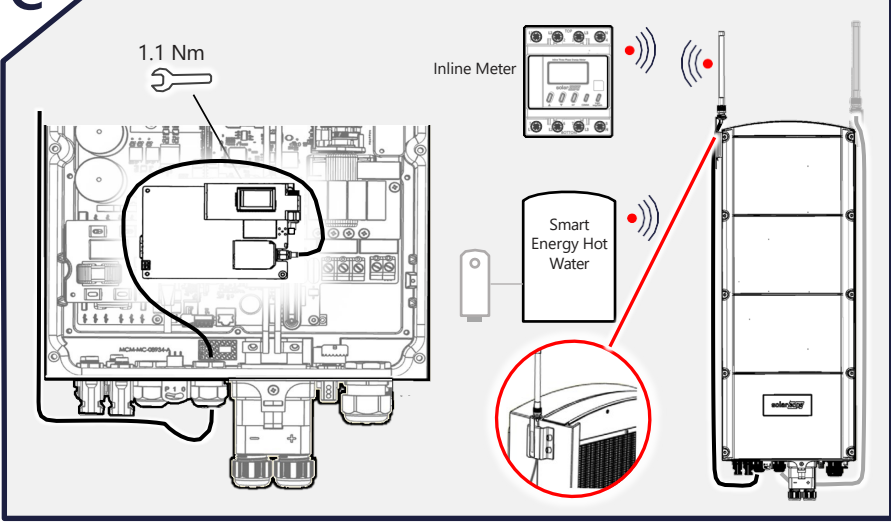


Battery Connection

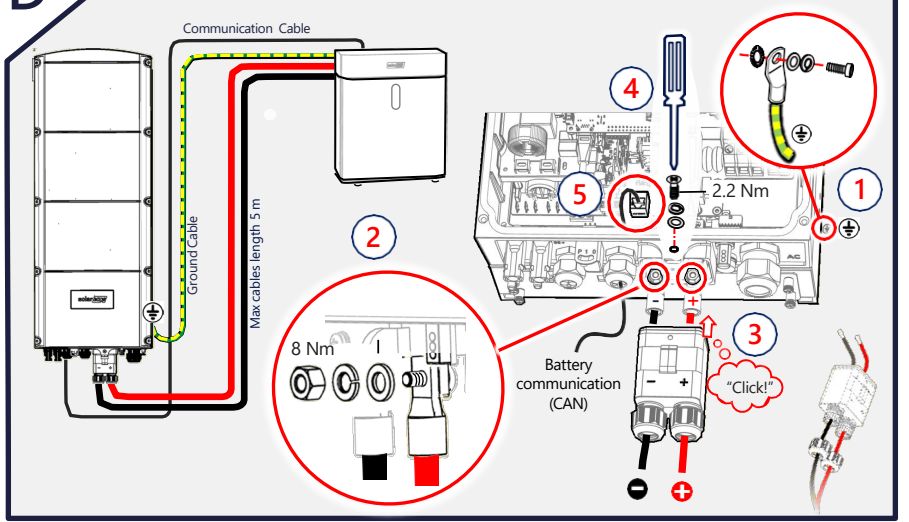

Chaining Multiple Inverters

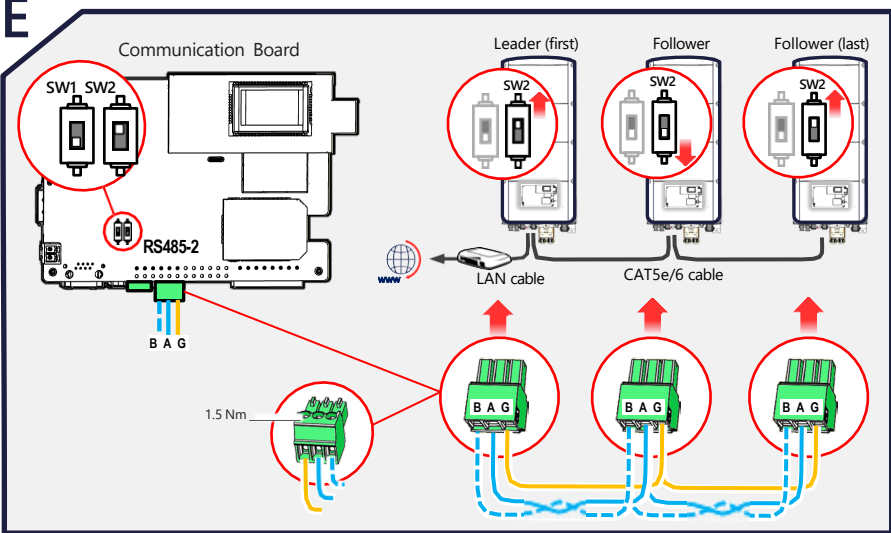


Backup Interface (BUI) and Manual Shutdown (MSD) Switch Connection

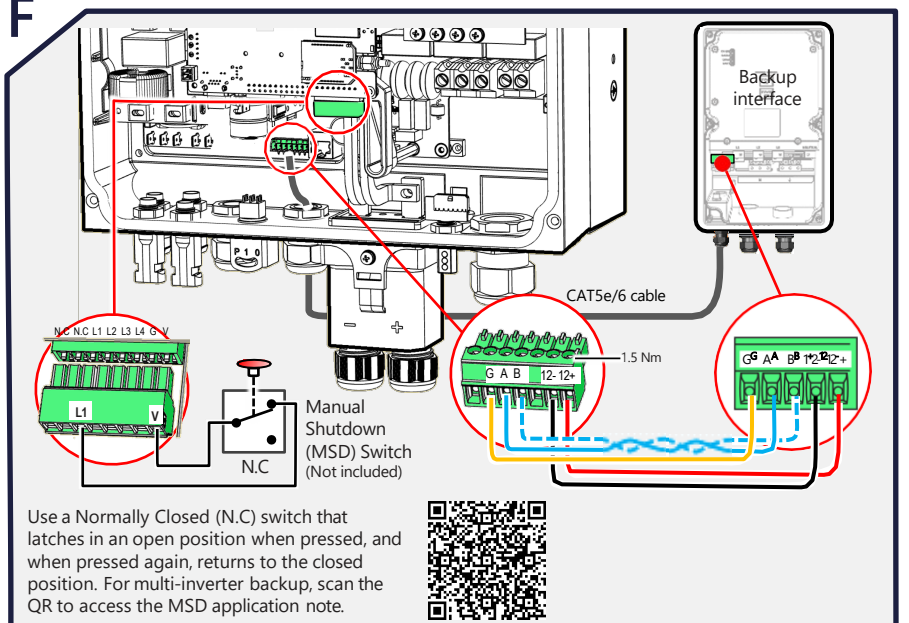


Meter Connection


1. BUI not installed.
2. Backup configuration is set to "partial home backup"
3. Meter is installed to support third-party production inverters)

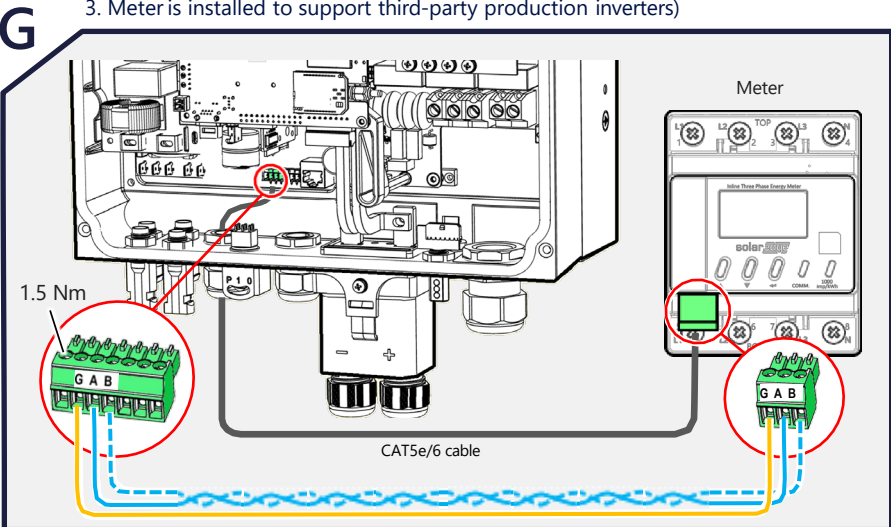


RS485 Connection Options

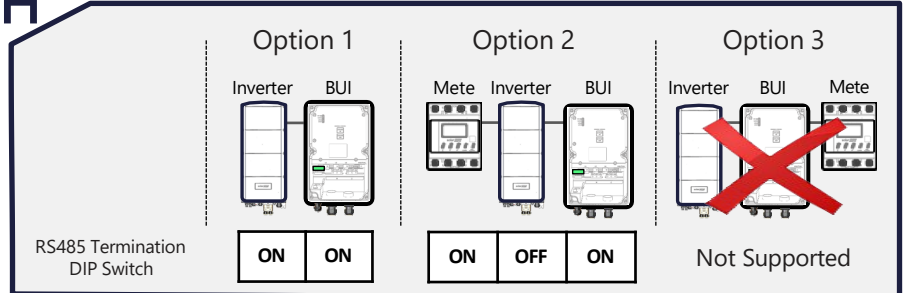


LAN Connection

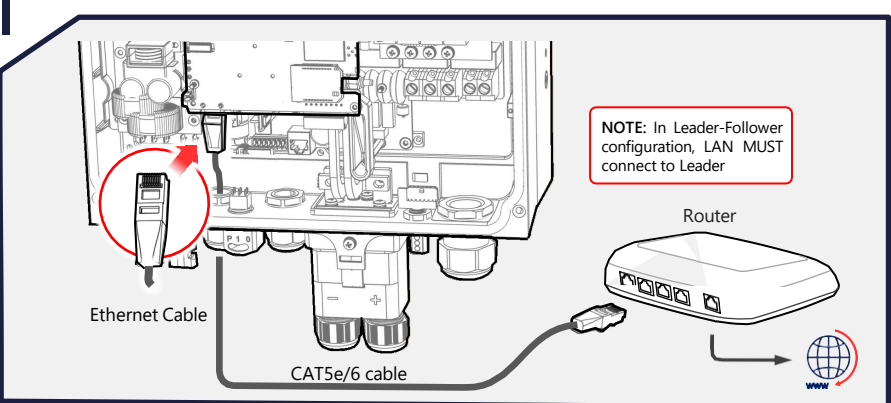

Commissioning the Inverter

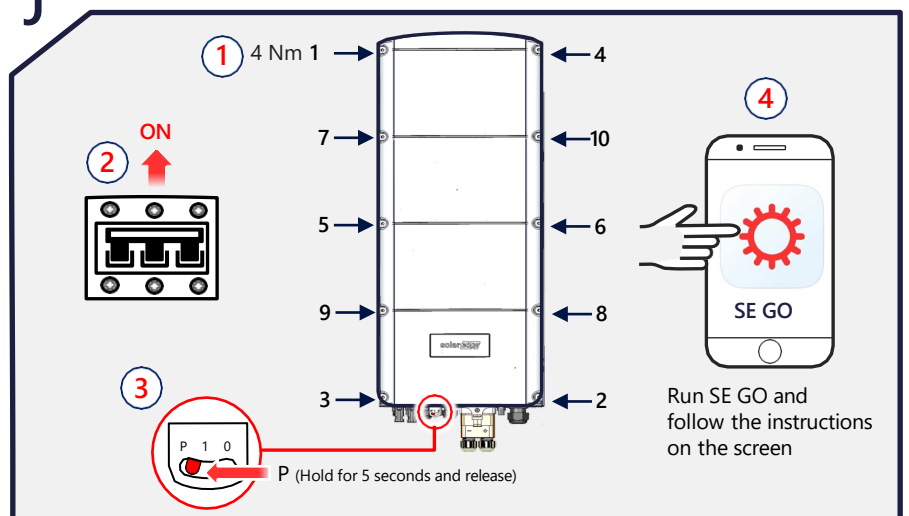

K LED Indications

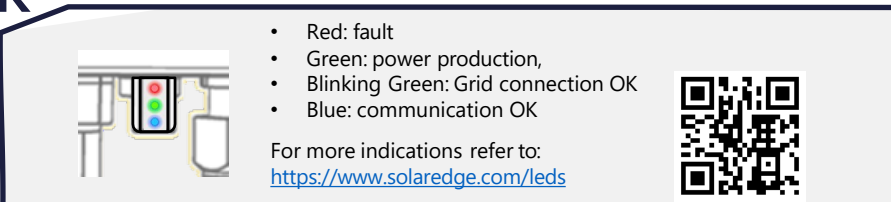

For remote status, fault indications, and system performance, refer to Remote Monitoring at: <https://www.solaredge.com/products/pv-monitoring/>

